


INFO SHEET ABi026

Promatic Series 4

How to code a BiSecur hand transmitter into a series 4 ProMatic operator.

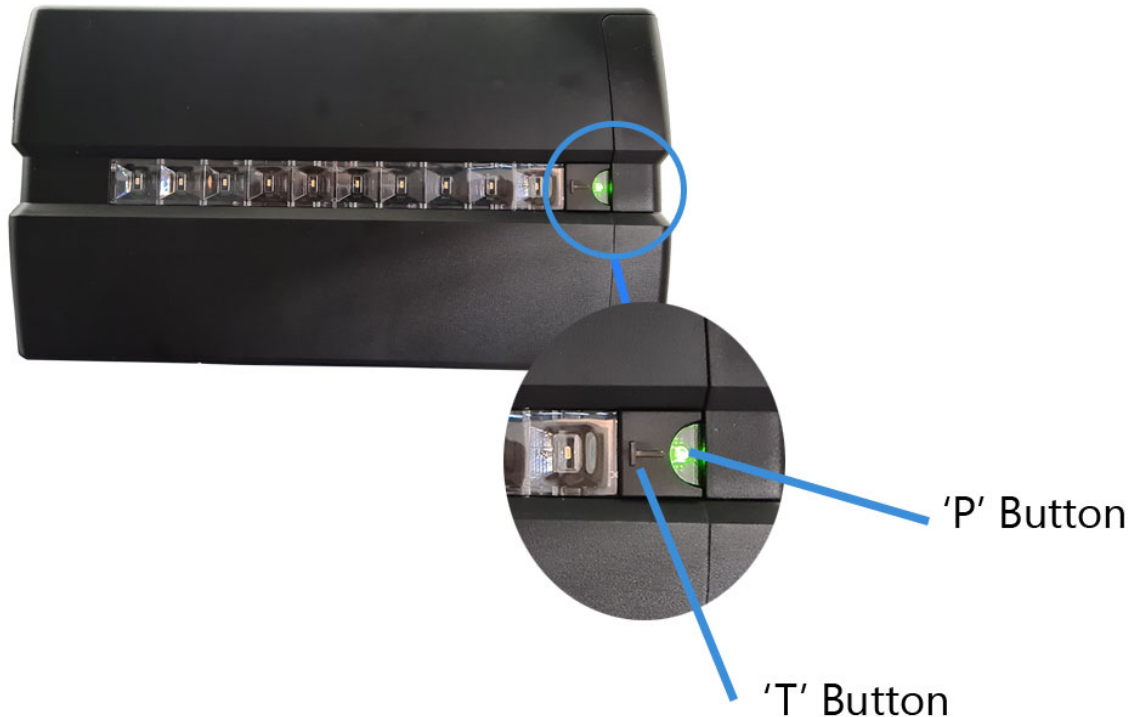

- 1) Press and release the program 'P' button once. The light will start to flash RED slowly. (Please Note: If you press the program button twice the red light will flash in a pattern of 2 flashes and this will code a hand transmitter into the light function, not full open)
- 2) With the hand transmitter near the head unit, Press and hold a button on the hand transmitter (the one which you want to operate the door) until the LED flashes RED and BLUE.
- 3) The red light on the ProMatic will now start to flash quickly. Keep the button held down on the hand transmitter for 5 more seconds and release. The red light on the head unit will revert back to flashing slowly.
- 4) To complete the procedure wait until the red light on the promatic stops flashing and shows a solid light.

The process is now complete and the hand transmitter should now activate the operator.